
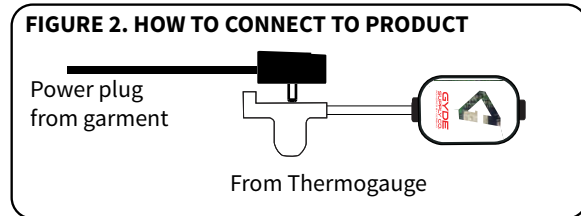


HOW IT WORKS

Thermogauge Bluetooth Controller Operation


How to connect to product

- Locate plug inside of wearers left lower pocket;
- Note: on a jacket or vest this plug will be in the access pocket inside of the hand warmer pocket.
- Open pocket and pull out power plug.
- Plug the female plug from the thermogauge (see figure 1) into the male plug from product, assure that the plug is secure.

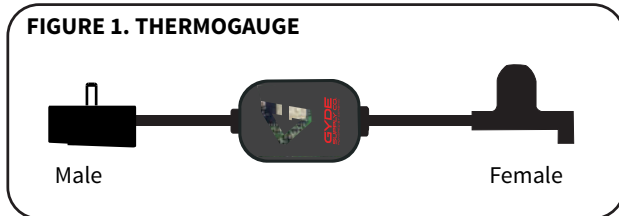


How to connect to battery

- On the opposing side there will be a male plug locate it (see figure 1).
- Plug that plug into the batteries' receiving dock at the top of the battery, this will be the same dock that you will use to charge your Gyde battery.
- Once plugged in; the Thermogauge and the battery will both illuminate, the battery has now recognized that it has a load, the Thermogauge will also illuminate showing it has received power and is waiting on the pairing process.

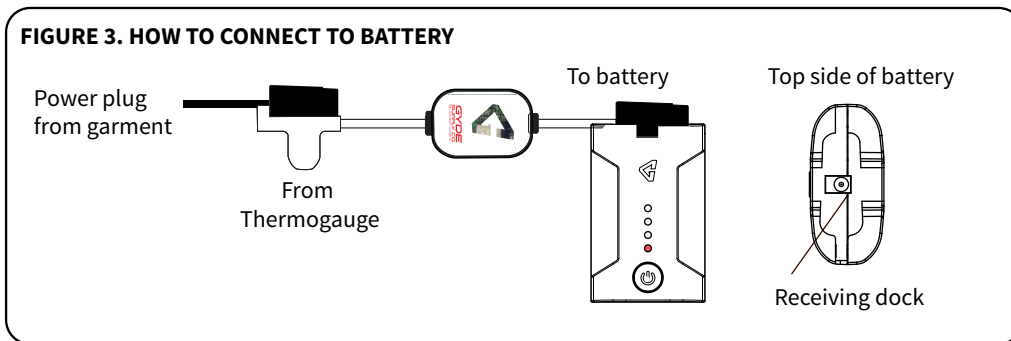

Pairing your Thermogauge™

- Note: This step will need to be completed after you have already downloaded the APP;
- Once the Thermogauge has indicated it is ready to be paired by illuminating.
- Locate the pairing page, on most devices the app will automatically pair, for those that don't pair automatically press "scan" on the Gyde sync page.
- Review found blue-tooth devices and choose the one for the Gyde product it will display "connecting" once connected it will refresh and display "connected".

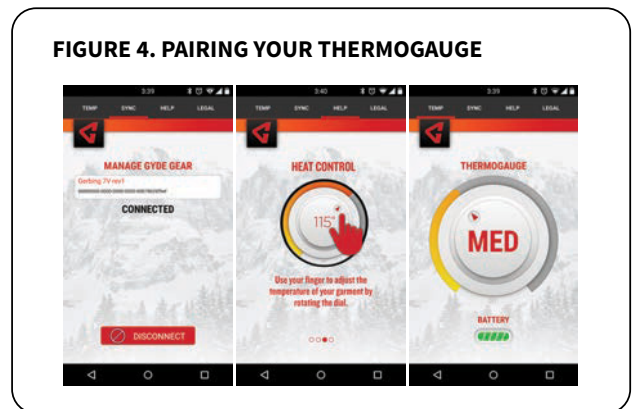

Thermogauge purchasing details are on page 32.